



QUICK INSTALLATION GUIDE

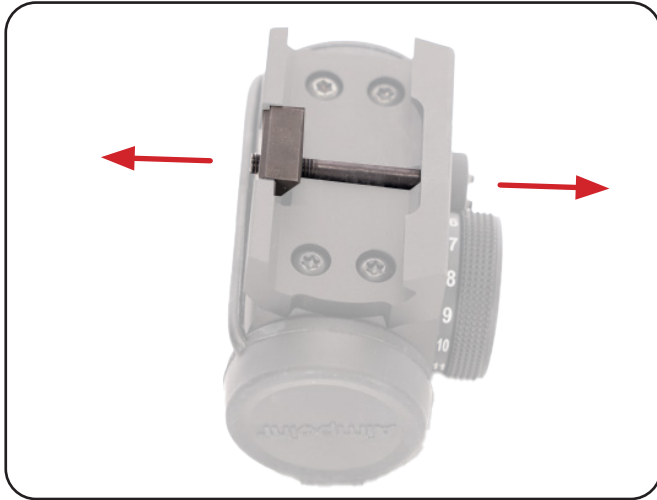

- Loosen and remove the screws of the original mount.
- Remove the clamping lever.

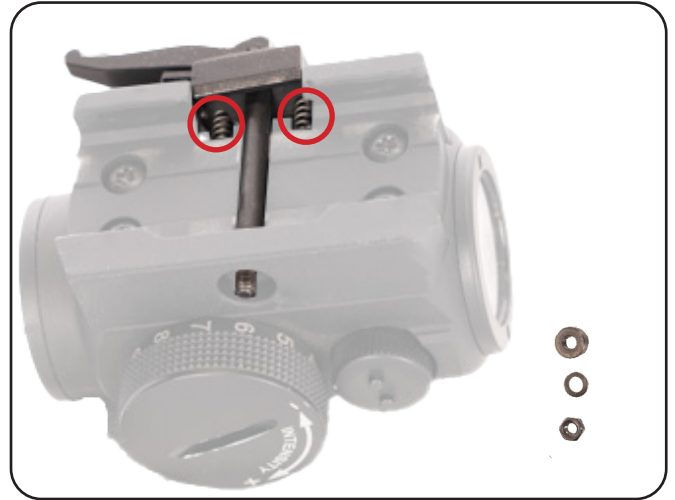

- Install the B&T QD Upgrade into the mount.
 - » Make sure the 2 springs are in their proper position.



- Mount the spacer and the spring washer.
- Lightly screw on the nut.



- Place the upgraded Aimpoint® Micro onto the NATO accessory rail.
- Tighten the nut with a wrench (SW 5.5mm) one turn and try to close the lever.
 - » Resistance should be felt at an angle of 45°. Otherwise tighten or loosen the nut.

All rights reserved. Data is provided for the purpose of product description only, and must not be construed as warranted characteristics in the legal sense. The information does not relieve users from the duty of conducting their own evaluations and tests. Because the products are subject to continual improvement, we reserve the right to amend the product specifications contained in this data sheet.