

GHM9/40/45 HA

OPERATOR MANUAL



B&T AG
3608 Thun • Switzerland
Tel +41 33 334 67 00
info@bt-ag.ch
www.bt-ag.ch


Table of content

1. General rules	5
1.1 Safety rules	5
1.2 Maintenance rules	5
2. Technical Specifications	6
2.1 Overview - GHM9/10/40/45	6
2.2 General description	6
2.3 General Technical data	7
2.3.1 Technical data - GHM9	8
2.3.2 Technical data - GHM40 G	8
2.3.3 Technical data - GHM45	9
2.4 Variant overview	10
3. Nomenclature.....	12
3.1 Weapon complete.....	12
3.2 Weapon disassembled.....	12
4. Handling and operating procedures	13
4.1 Clearing weapon	13
4.2 Operating fire selector	13
4.3 Magazine catch	14
4.3.1 Operating magazine catch.....	14
4.3.2 Magazine catch standard magazine.....	14
4.3.3 Magazine catch Glock magazine	14
4.3.4 Magazine catch SIG magazine.....	14
4.4 Stock / Adapter	15
4.4.1 Close folding stock (standard)	15
4.4.2 Open folding stock (standard).....	15
4.4.3 Retracting telescopic stock	16
4.4.4 Extracting telescopic stock	16
4.4.5 Retracting Brace Adapter	17
4.4.6 Extracting Brace Adapter	17
4.4.7 Close M4-Buffer Tube.....	18
4.4.8 Open M4-Buffer Tube	18
4.5 Pistol grip storage compartment.....	19
4.5.1 Open the pistolgripcover	19
4.5.2 Close the pistolgripcover.....	19
4.6 Iron sights	20
4.6.1 Engaging iron sights.....	20
4.6.2 Adjustments.....	20
4.7 Bolt catch.....	21
4.7.1 Holding bolt in open position	21
4.7.2 Closing Bolt	21

4.8	Loading and unloading weapon	22
4.8.1	Loading weapon.....	22
4.8.2	Unloading weapon during firing sessions.....	22
4.8.3	Unloading weapon for storage.....	23
4.9	Firing the GHM	23
5.	Maintenance procedures	24
5.1	Disassembly.....	24
5.1.1	Disassembly of the weapon	24
5.1.2	Disassembly of the handguard	26
5.2	Cleaning and inspections.....	27
5.3	Reassembly.....	28
5.3.1	Reassembly of the weapon.....	28
5.3.2	Assembly of the handguard	30
5.4	Functional check	31
5.5	Troubleshooting table	32
6.	Accessories.....	33
6.1	Stocks / Adapters.....	33
6.2	Flashhider	34
6.3	Lights	34
6.4	Magazines.....	35
6.5	Silencer	36
6.6	Sights	37
6.7	Charging handle	37
6.8	Grips	38
6.9	Maintenance	39
7.	Warranty statement	40


Related documents:


Parts catalogue	PC-GHM9-EN
Parts catalogue	PC-GHM10 G-EN
Parts catalogue	PC-GHM40 G-HA-EN
Parts catalogue	PC-GHM45-HA-EN

ADVICE!	
	<p>This operator manual covers the entire SPC9/10/40 and 45 weapon family. The Pictures show the Standard Version. Where necessary the operating steps are shown separately for the different variants</p> <p>Due to continuous efforts to improve the weapon, it is possible that certain descriptions in this manual may differ from the actual weapon.</p>

Abbreviations

POA:	Point of Aim
POI:	Point of Impact
MPI:	Mean Point of Impact
Left / right side:	Defined looking in firing direction.

EYE PROTECTION MUST BE WORN!	
	<p>SAFETY GOGGLES MUST BE WORN WHEN DISASSEMBLING AND REASSEMBLING THE GUN. PARTS CAN GET INTO THE EYES IF HANDLED INCORRECTLY.</p>

EAR PROTECTION MUST BE WORN!	
	<p>SUITABLE HEARING PROTECTION MUST ALWAYS BE WORN WHEN SHOOTING WITH A FIREARM.</p>

1. General rules

READ MANUAL BEFORE USE.

1.1 Safety rules

1. Consider every weapon loaded until checked personally by the individual operator.
2. Always keep fingers off the trigger and outside the trigger guard until the sights are on target.
3. Always point the weapon in a safe direction.
4. Verify your target and the backstop.
5. Before firing always verify the serviceability and condition of both the weapon and ammunition.
6. Hearing and eye protection are mandatory.
7. Be sure to use NATO, SAAMI or CIP certified cartridges of correct caliber only.

SAFETY ADVICE!



Defects that can be traced back to the use of non NATO, SAAMI or CIP ammunition (especially reloaded cartridges) are not covered by the guarantee!

8. If a cartridge fails to ignite, keep the muzzle pointed in a safe direction and open the chamber only after a minimum of 30 seconds.
9. Live fire training should be carried out in open or well-ventilated areas to prevent excessive exposure to toxic gases.
10. Operate your weapon consciously and do not use excessive force.

1.2 Maintenance rules

1. The weapon is to be cleaned after each deployment or firing.
2. Any malfunctions are to be reported to the unit armorer or manufacturer.
3. The weapon is to be presented to the unit armorer for inspection after a suspicious event or a minimum of once per year.

2. Technical Specifications

2.1 Overview - GHM9/10/40/45



2.2 General description

The GHM9/10/40/45 is a semi-automatic carbine.

The working principle is recoil operation:

The recoil of a fired projectile is driving the bolt rearward. When traveling back, the bolt extracts and ejects the case of the fired cartridge, compresses the mainspring and cocks the internal hammer of the single action trigger group. At the very end of the bolt's travel, a hydraulic recoil buffer is stopping it gently and the compressed mainspring drives the bolt back against the barrel. While traveling forward, the bolt feeds a new cartridge out of the magazine into the chamber of the barrel. After completion of such a cycle, the weapon is loaded and armed. The next shot is released by pulling the trigger.

The weapon has mechanical flip up sights, an additional reflex sight can be mounted on the accessory rail. The reflex sight can be included in the scope of delivery, depending on the version of the weapon. Controls such as bolt catch, magazine catch, fire selector and charging handle are designed ambidextrous.

2.3 General Technical data

Designation	GHM_
Manufacturer	B&T AG - Switzerland
Operating system	Recoil operated, closed bolt blowback action
Sights	Flip-up iron sight with two aperture holes
Bore height	69 mm / 2.71 in
Rail height	28 mm / 1.10 in
Interfaces	2 NATO accessory rails, M-LOK(front left and right side)
Scope of delivery	Weapon with magazines, carrying sling, cleaning kit, case

Stock options	Stock Length		Weight difference to standard [kg]
	extracted / foldet out [mm]	retracted / foldet [mm]	
Folding stock (stand.)	216	23	0
Telescopic brace**	203	51.5	+247
Brace-adapter**	188	70	+237
NAR-adapter	16	16	-95
M4-buffer-tube	38	18	+5
Pistol	23	23	-128

**Extracted to the maximum, intermediate positions existent.

The overall length is determined by adding the receiver length and the stock length

Technical data are provided for information only and shall not serve as acceptance criteria.

2.3.1 Technical data - GHM9

Designation	GHM9
Product ID	BT-450000
Caliber	9x19 mm
Magazine capacity	15/30 round
Rifling	6 Grooves, Right hand twist

Type		Standard	SD	Short	Long	SPORT	SPORT Long
Barrel Length	[mm]	175	110	110	225	420	477
Length Standard	[mm]	628	638	563	678	873	930
Length Receiver	[mm]	412	422	347	462	657	714
Width	[mm]	71					
Height*	[mm]	197					
Weight	[kg]	2.3	2.3	2.21	2.39	2.8	2.81

* Without magazine, flip-up sights folded.

2.3.2 Technical data - GHM40 G

Designation	GHM40 G
Product ID	BT-450010
Caliber	.40 S&W
Magazine capacity	22 Schuss
Rifling	6 Grooves, Right hand twist

Barrel Length	[mm]	175
Length Standard	[mm]	435
Length Receiver	[mm]	412
Width	[mm]	65
Height*	[mm]	205
Weight	[kg]	2.38

* Without magazine, flip-up sights folded.


2.3.3 Technical data - GHM45

Designation	GHM45
Product ID	BT-450005
Caliber	.45 ACP
Magazine capacity	15/30 Schuss
Rifling	6 Grooves, Right- or left hand twist

Barrel Length	[mm]	175
Length Standard	[mm]	628
Length Receiver	[mm]	412
Width	[mm]	65
Height*	[mm]	205
Weight	[kg]	3.27


* Without magazine, flip-up sights folded.

2.4 Variant overview

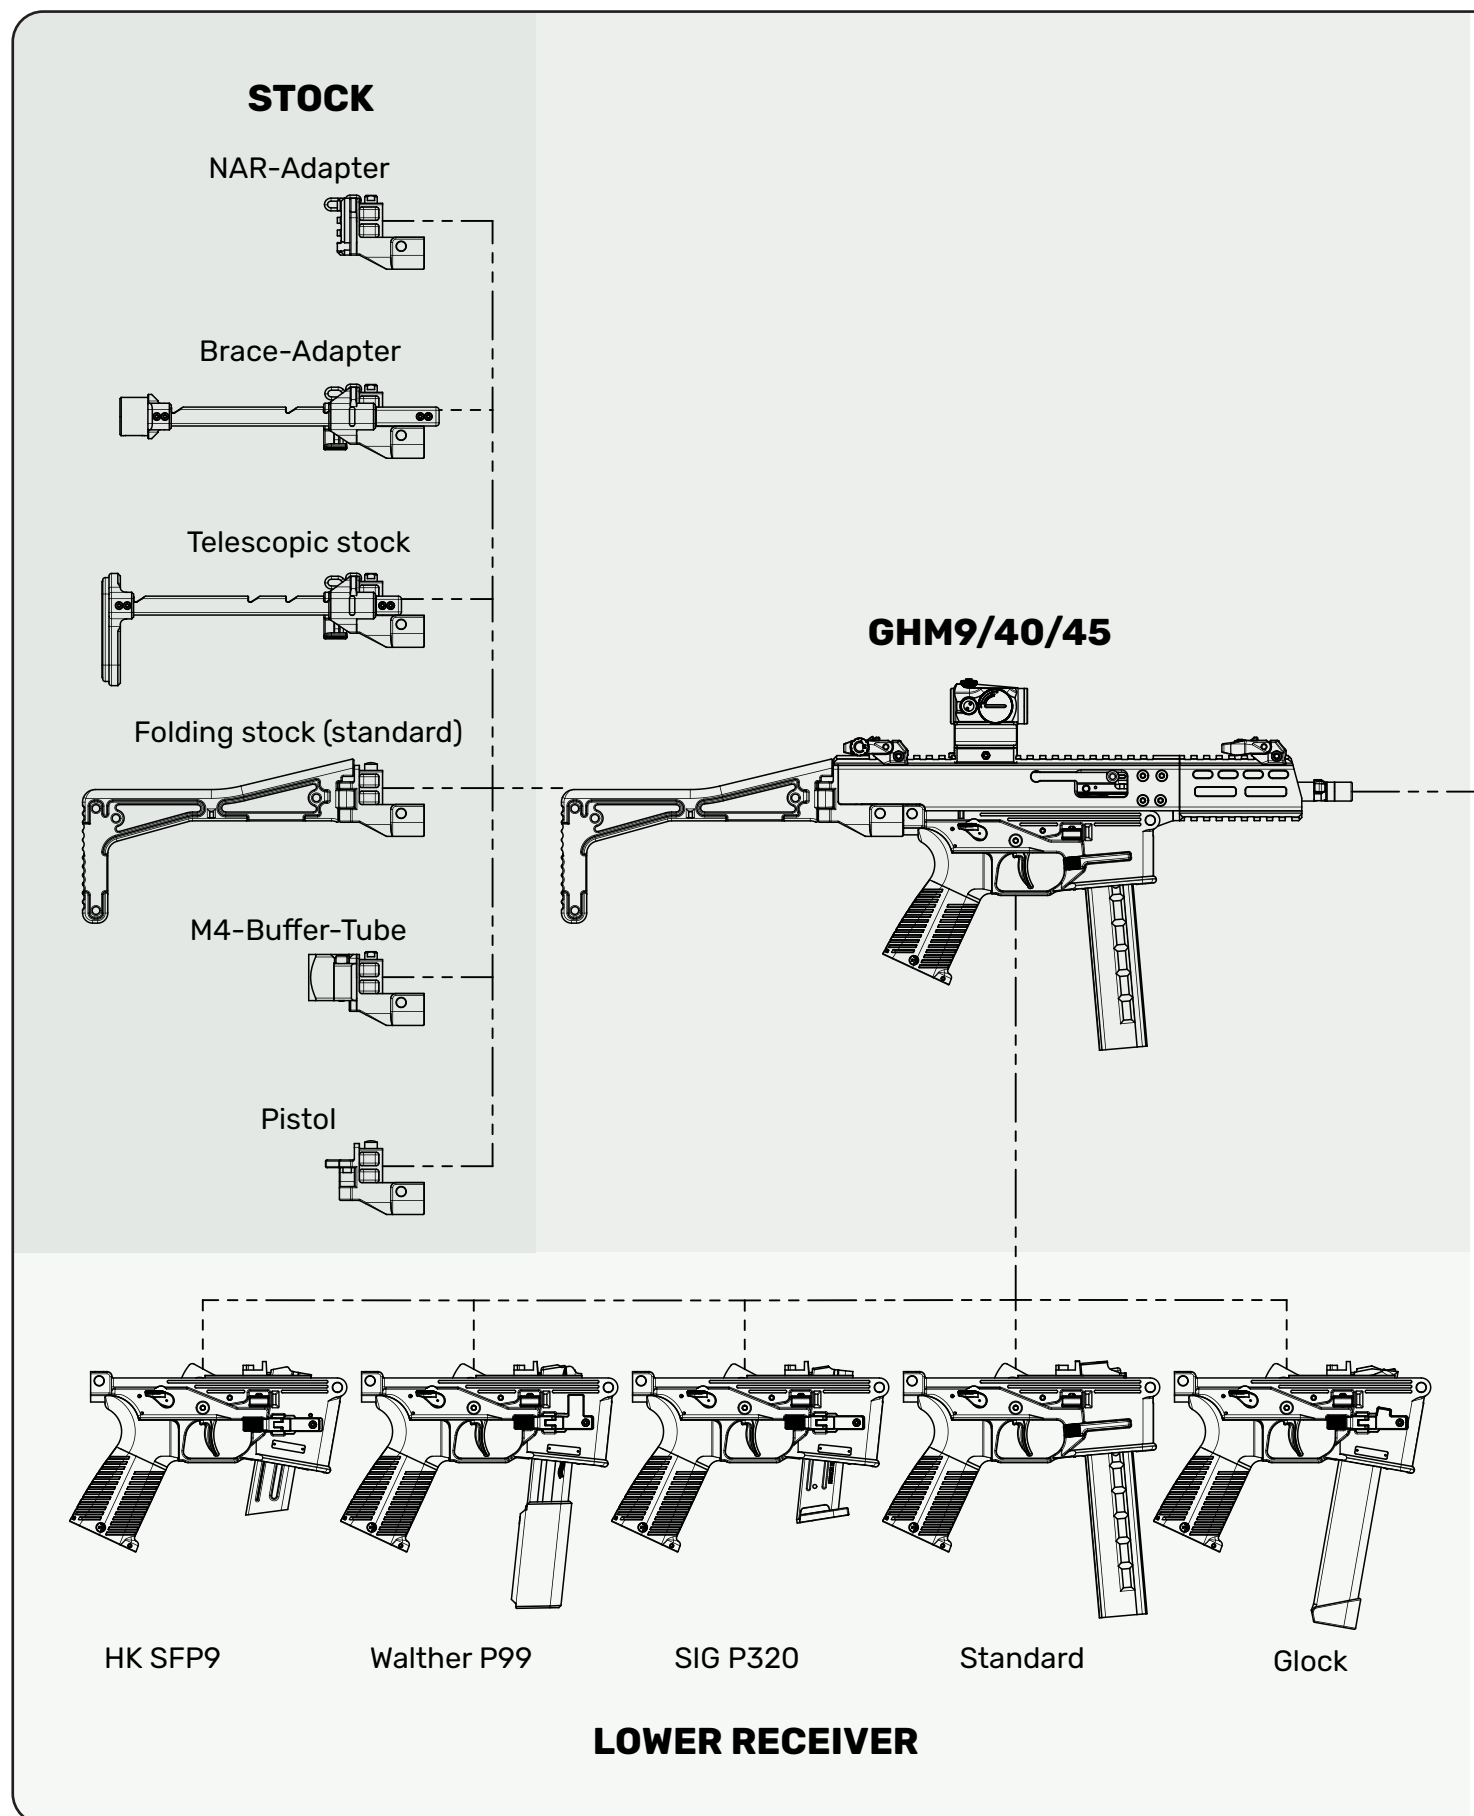


UPPER RECEIVER


SD




Short




Standard




Long



SPORT



SPORT Long




3. Nomenclature

3.1 Weapon complete




3.2 Weapon disassembled

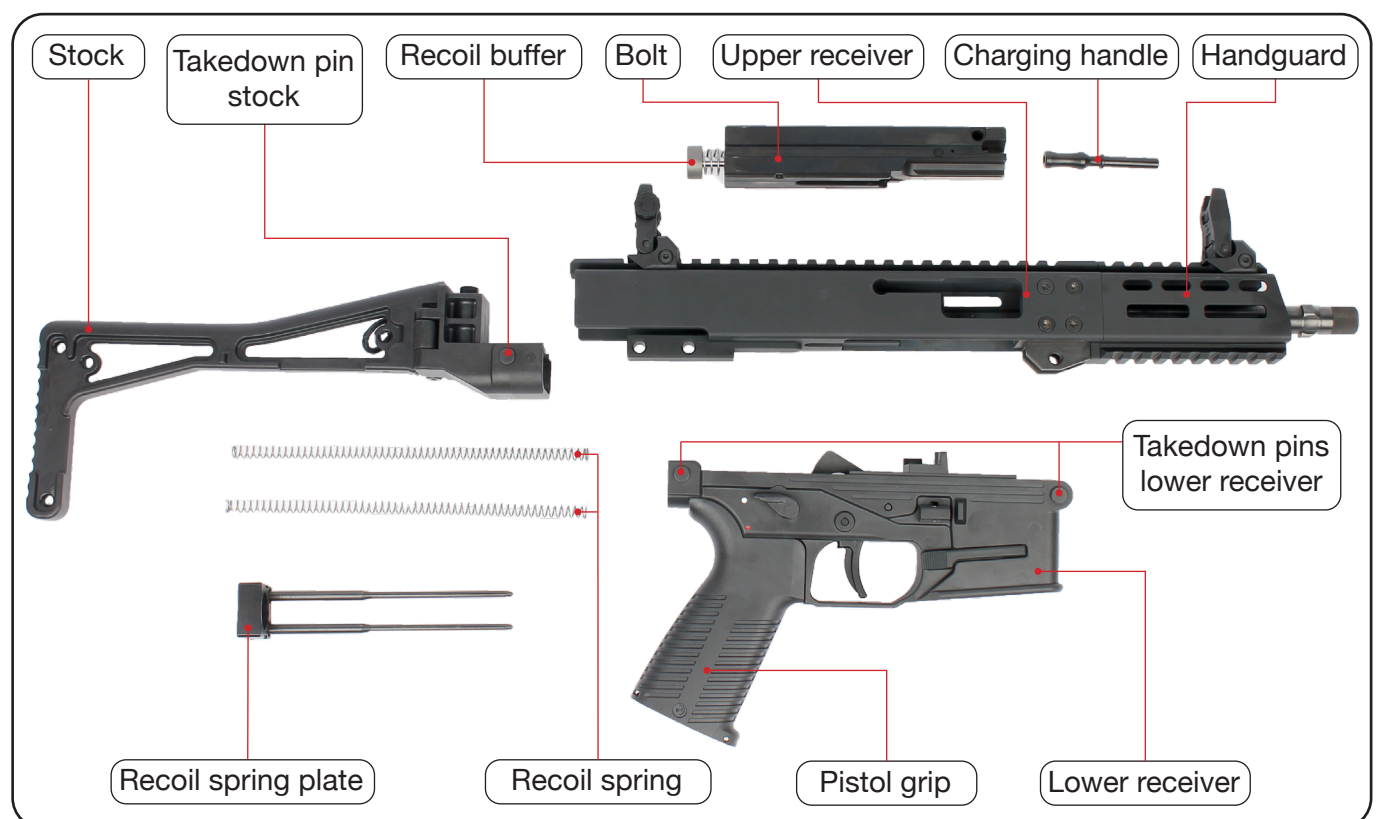

4. Handling and operating procedures

4.1 Clearing weapon

- Rotate the fire selector to «safe» position (see chapter „4.1 Clearing weapon“ on page 13).
- Press the magazine retainer and pull the magazine downward out.

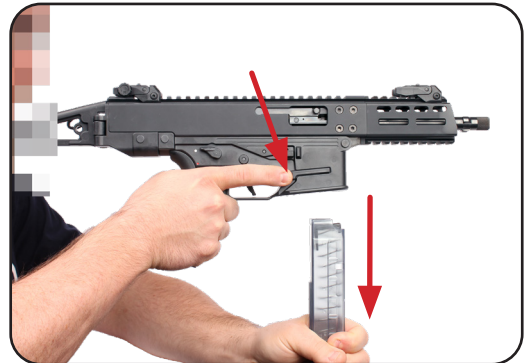

- Pull the charging handle completely to the rear and inspect the chamber visually to be clear.
- Lock the bolt in open position (see chapter „4.7 Bolt catch“ on page 21).




4.2 Operating fire selector

- The positions of the fire selector are marked on both side of the weapon.
- Rotate the fire selector in order to engage the desired mode.



WHITE DOT = SAFE


RED DOT= SINGLE FIRE

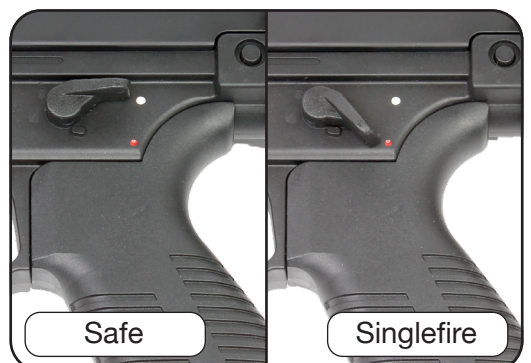

4.3 Magazine catch


4.3.1 Operating magazine catch

- Rotate the fire selector to «safe» position (see chapter „4.1 Clearing weapon“ on page 13).
- Press the magazine retainer and pull the magazine downward out.

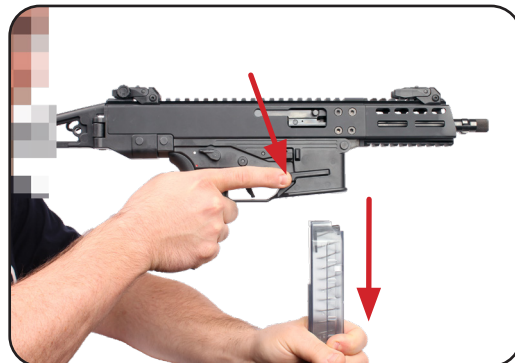


4.3.2 Magazine catch standard magazine

- Magazine catch of the standard magazine on left and right side of the lower receiver.

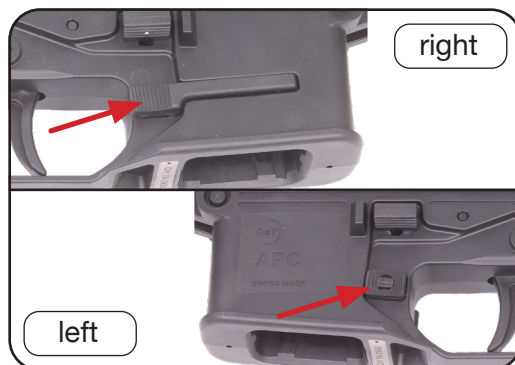


4.3.3 Magazine catch Glock magazine

- Magazine catch of the Glock magazine on left and right side of the lower receiver.

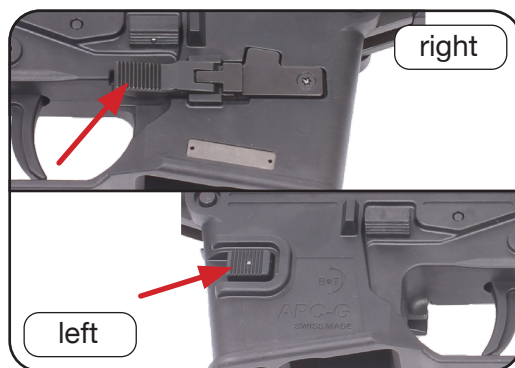

4.3.4 Magazine catch SIG magazine


- Magazine catch of the SIG magazine on left and right side of the lower receiver.

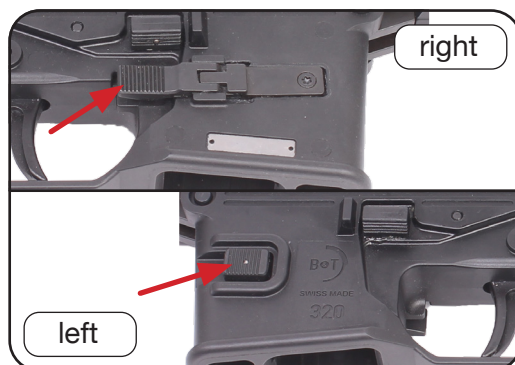

4.4 Stock / Adapter

4.4.1 Close folding stock (standard)

- a. Grasp the weapon with the firing hand on the pistol grip.
- b. Push the Locking knob with the non firing hand, and fold it.

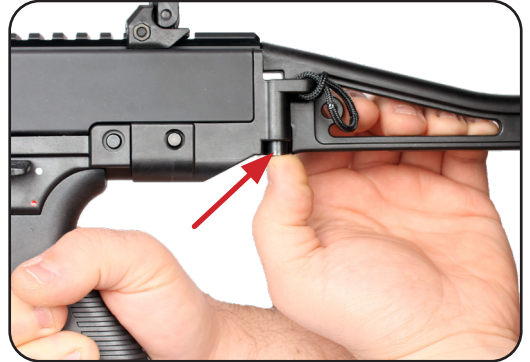


- c. Fold in the Stock until it reaches the end position and locks audibly.




4.4.2 Open folding stock (standard)

- a. Grasp the weapon with the firing hand on the pistol grip.
- b. Grasp the locking knob with the non firing hand, and fold it out the stock.

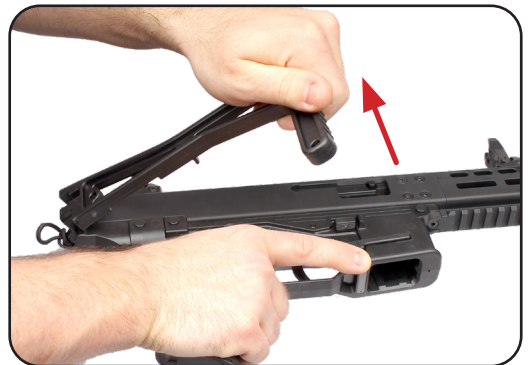


- c. Fold out the Stock until it reaches the end position and locks audibly.
- d. Use the non-firing hand to check the correct locking of the stock.

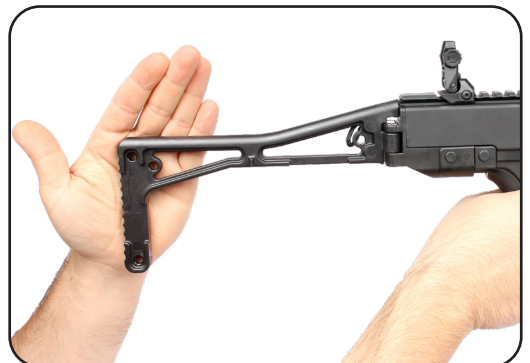


4.4.3 Retracting telescopic stock

- a. Grasp the weapon with the firing hand on the pistol grip.
- b. Push the Locking knob with the thumb of the firing hand, and push in the stock.

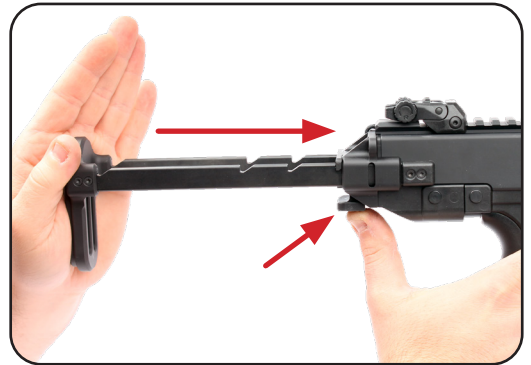

- c. Push in the Stock until it reaches the end position and locks audibly.

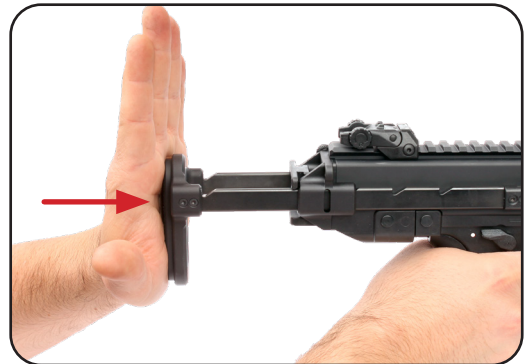

4.4.4 Extracting telescopic stock

- a. Grasp the weapon with the firing hand on the pistol grip.
- b. Pull out the stock with the non firing hand.




- c. Pull out the stock until it reaches the desired position. Let the locking knob engage in the locking position




4.4.5 Retracting Brace Adapter

- a. Grasp the weapon with the firing hand on the pistol grip.
- b. Push the Locking knob with the thumb of the firing hand, and push in the stock.

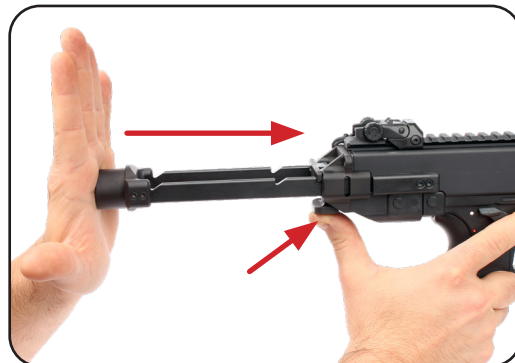


- c. Push in the Stock until it reaches the end position and locks audibly.

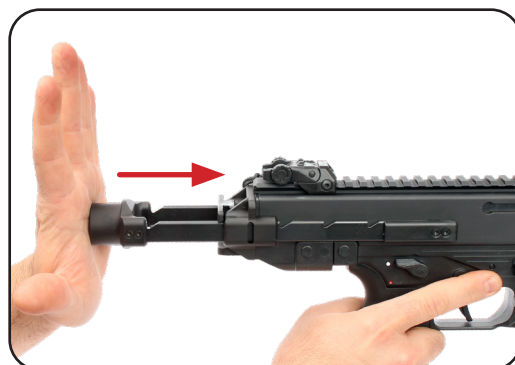


4.4.6 Extracting Brace Adapter

- a. Grasp the weapon with the firing hand on the pistol grip.
- b. Pull out the stock with the non firing hand.

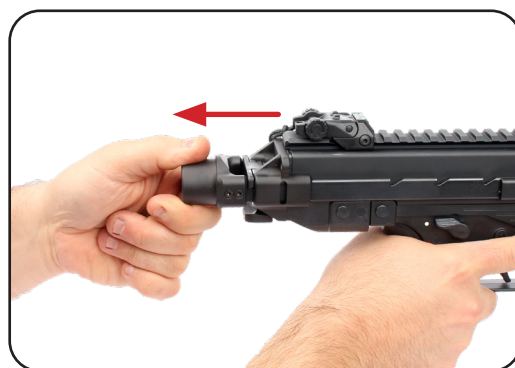

- c. Pull out the stock until it reaches the desired position. Let the locking knob engage in the locking position.

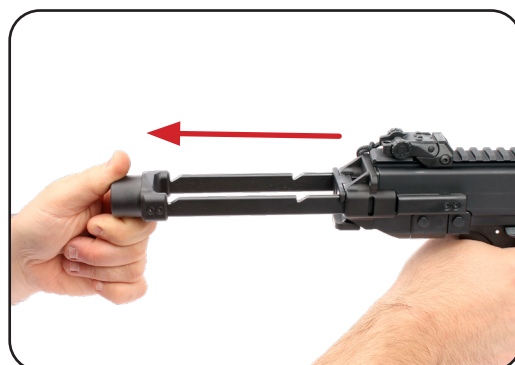

4.4.7 Close M4-Buffer Tube

- a. Grasp the weapon with the firing hand on the pistol grip.
- b. Push the Locking knob with the non firing hand, and fold it.



- c. Fold in the Stock until it reaches the end position.



4.4.8 Open M4-Buffer Tube

- a. Grasp the weapon with the firing hand on the pistol grip.
- b. Grasp the locking knob with the non firing hand, and fold it out the stock.



- c. Fold out the Stock until it reaches the end position and locks audibly.
- d. Use the non-firing hand to check the correct locking of the stock.



4.5 Pistol grip storage compartment

4.5.1 Open the pistolgripcover

- a. Slide a screw driver in the gap at the front of the compartment cover.
- b. Push the cover backward and lift it up.



4.5.2 Close the pistolgripcover

- c. In order to close the cover, push it back until it audibly snaps into closed position.





4.6 Iron sights

4.6.1 Engaging iron sights

a. Push front sight up until it snaps in upright position.

b. Push rear sight up until it snaps in upright position.

c. Select large or small aperture.

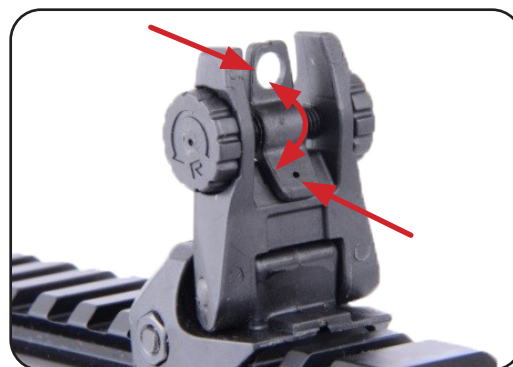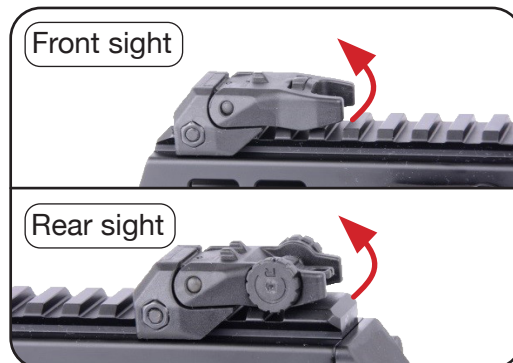

4.6.2 Adjustments

a. Turn the adjusting wheel in the front sight in the direction of the arrow «UP» to raise the MPI.




b. Turn the rear sight wheel in the direction of the arrow «R» to move the MPI to the right.



4.7 Bolt catch

4.7.1 Holding bolt in open position

- a. Remove magazine (see chapter „4.3 Magazine catch“ on page 14).
- b. Grab the charging handle and pull the bolt to the rear-most position and hold it there.

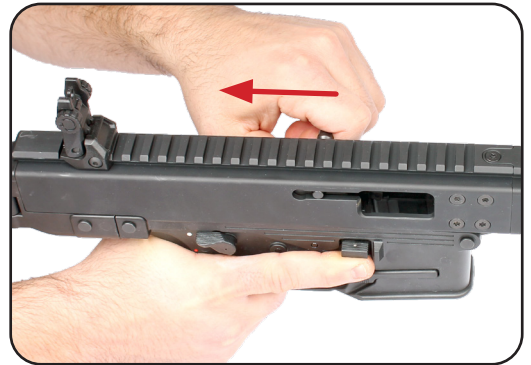

- c. Push the bolt catch upwards (available on left and right weapon side).
- d. Allow the bolt to travel forward until stopped and held by the bolt catch.
- e. Push the charging handle to its foremost position.



4.7.2 Closing Bolt

- a. Push the external bolt catch (available on left and right weapons side) until the bolt snaps into closed position.



4.8 Loading and unloading weapon

4.8.1 Loading weapon

- Fill the cartridges one by one into the magazine.
- Grab the weapon and engage safety (see chapter „4.2 Operating fire selector“ on page 13).
- Insert magazine.
- Pull the magazine slightly downward to verify it is locked in place.



- If the bolt is open, push the external bolt catch downwards.
- If the bolt is closed, vigorously pull back the charging handle to its rearmost position and allow the bolt to snap forward under its own power.



- Slightly pull the bolt rearward until you can spot the brass of the chambered cartridge in order to verify the weapon is loaded.




4.8.2 Unloading weapon during firing sessions


- Engage safety (see chapter „4.2 Operating fire selector“ on page 13).
- Remove the magazine (see chapter „4.3 Magazine catch“ on page 14).
- Pull the charging handle rearward and observe the chambered cartridge being ejected.
- Hold the bolt in open position using the bolt catch (see chapter „4.7.1 Holding bolt in open position“ on page 21) and make a visual check to see if the chamber is empty.
- Recover the loose cartridge.

4.8.3 Unloading weapon for storage

- Unload the weapon (see chapter „4.8.2 Unloading weapon during firing sessions“ on page 22).
- Close the bolt (see chapter „4.7.2 Closing Bolt“ on page 21).
- Disengage safety (see chapter „4.2 Operating fire selector“ on page 13).
- Point the weapon into a safe direction and pull the trigger - the hammer strikes audibly.
- Engage safety (see chapter „4.2 Operating fire selector“ on page 13).
- Lock the Bolt to the rear (see chapter „4.7.1 Holding bolt in open position“ on page 21).
- Insert the “Safety-Flag”.
- Close the bolt slowly with the safety flag inserted.

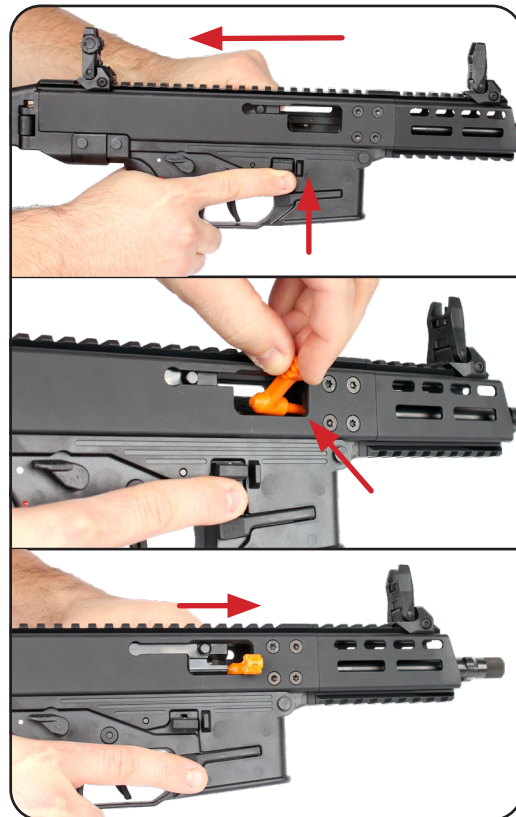


4.9 Firing the GHM


SAFETY ADVICE!	
	REFER «CHAPTER „1.1 SAFETY RULES“ ON PAGE 5»

- Engage iron sights (see chapter „4.6.1 Engaging iron sights“ on page 20).
- Load the Weapon (see chapter „4.8.1 Loading weapon“ on page 22).
- Apply a proper firing position.
- Disengage Safets (see chapter „4.2 Operating fire selector“ on page 13).
- Pull the trigger until the shot is released.



Advice	
	Refer to (see chapter „5.4 Functional check“ on page 31).

5. Maintenance procedures

Advice!	
	DO NOT OPERATE THE TRIGGER WHEN THE WEAPON IS DISASSEMBLED.



5.1 Disassembly

5.1.1 Disassembly of the weapon


- Clear the weapon (see chapter „4.1 Clearing weapon“ on page 13).
- Close the bolt (see chapter „4.7 Bolt catch“ on page 21).
- Press the front and rear take-down pin from left side to right side and pull it out from right side until the lower receiver comes loose.




- Separate the lower receiver from the weapon.




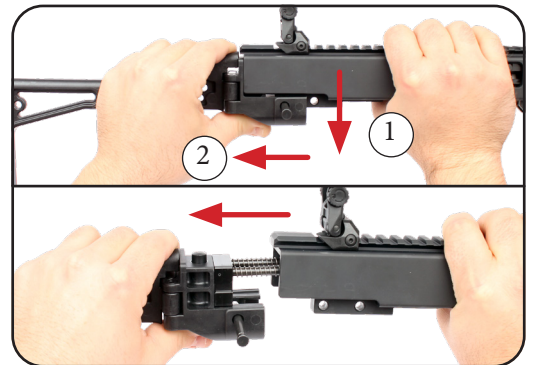
- Press the take-down pin on the stock from left side to right side and pull it out from right side as far as possible.

Advice!	
	The telescopic stock must be in retracted position for pushing out the rear take-down pin.

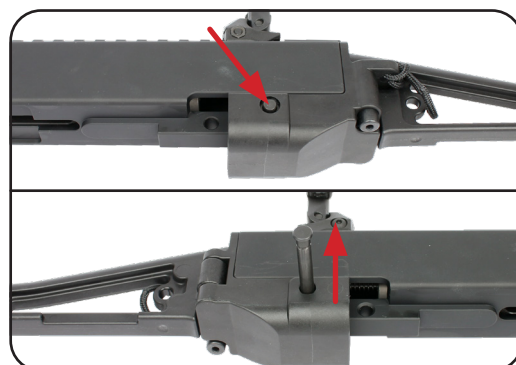


- f. Grasp the stock, carefully press it down and pull it backwards out of the upper receiver.

SAFETY ADVICE!	
	Press the stock down very carefully! The recoil springs are under tension and can therefore eject the recoil spring plate.



- g. Pull the recoil spring plate and the closing springs backwards out of the housing.

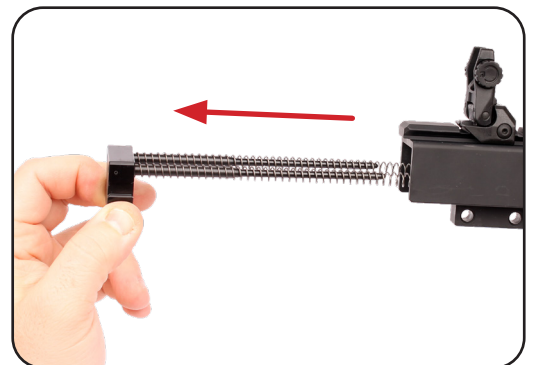


- h. Pull the closing springs off the recoil spring plate.



- i. Pull the front charging handle back until it is aligned with the cutout in the receiver and pull out the front charging handle sideways.



- j. Pull the bolt rearward out of the receiver and remove it.

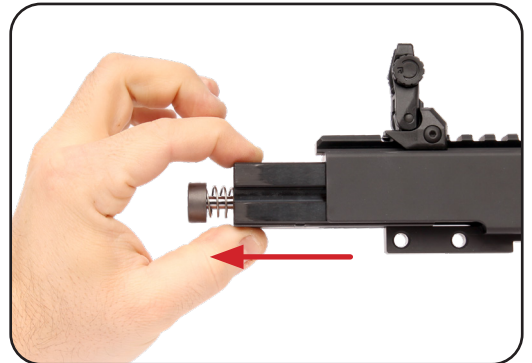


The weapon is now disassembled and ready for cleaning and inspections.



5.1.2 Disassembly of the handguard

- If installed, unscrew the suppressor.
- Loosen and remove the upper screw on the hand guard.
- Loosen and remove the lower screw on the hand guard.
- Pull the hand guard forward away from the housing and remove it.

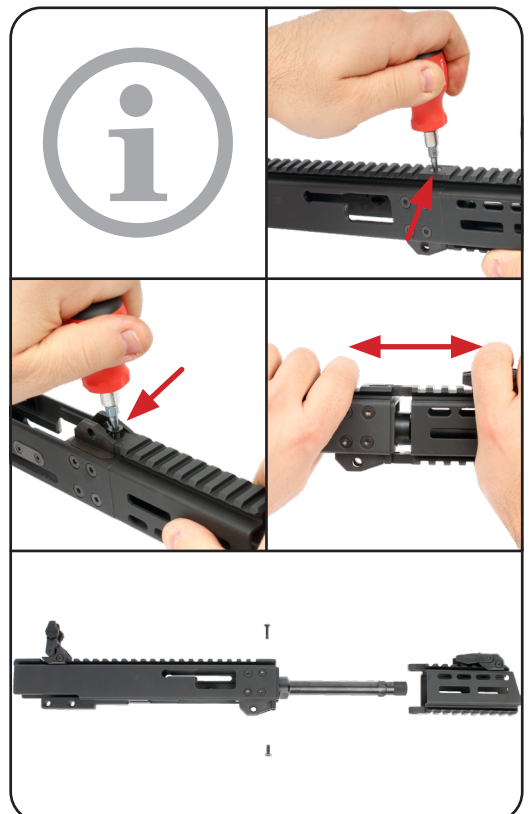

The upper receiver is now disassembled and ready for cleaning and inspections.

5.2 Cleaning and inspections

- a. Use a cleaning rod of suitable length with a copper brush to clean the barrel from the rear side.
- b. Use a small brush to remove particles captured in the cavities of lower and upper receiver.
- c. Use an oiled rag to wipe clean all accessible surfaces.
- d. Inspect all components and accessible parts for cracks, deformations or other signs of deterioration.
- e. Apply a slight film of oil to all accessible surfaces of steel parts.

SAFETY ADVICE!






ADDRESS TO AN ARMORER IF THE SERVICEABILITY OF THE WEAPON SEEMS
DOUBTFUL.

5.3 Reassembly

5.3.1 Reassembly of the weapon

- a. Assemble the upper receiver (see chapter „5.3.2 Assembly of the handguard“ on page 30).
- b. Insert the Bolt into the Receiver.
- c. Push in the bolt until it is aligned with the cutout in the receiver for installing the charging handle.
- d. The front charging handle can be inserted on both sides of the receiver, depending on the users desire.
- e. Push the recoil springs over the pins of the recoil spring plate.
- f. Insert the recoil spring plate with mounted recoil springs into the housing, making sure that the recoil springs are centered in the guide holes of the bolt.

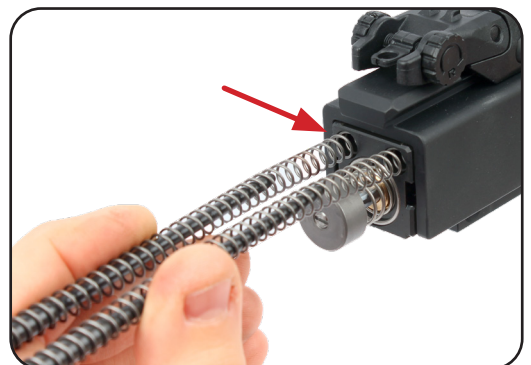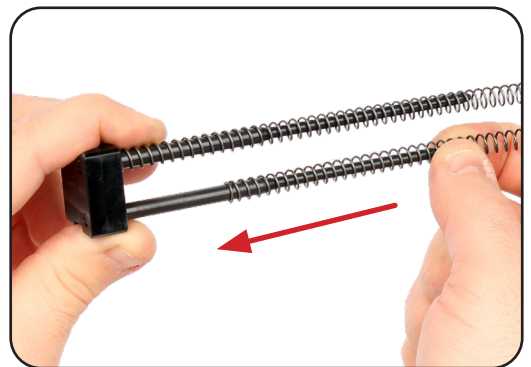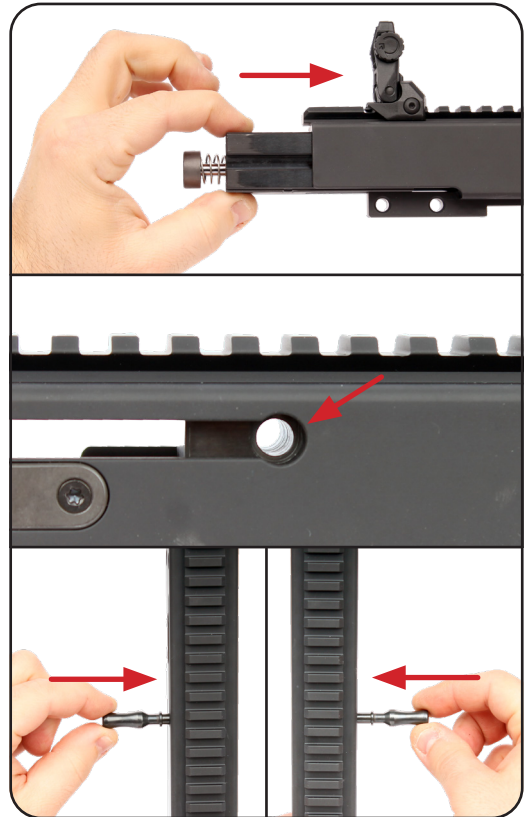


Advice!




The telescopic stock must be in retracted position


- g. Place the stock on the receiver in such a way that it rests on the of the recoil spring plate and the surface of the cylindrical pin is in contact with the receiver.

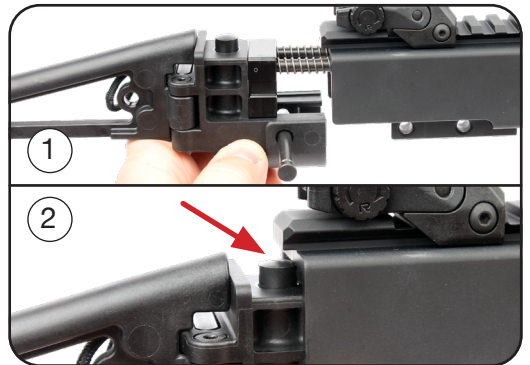


- h. Insert the stock into the receiver and push it upwards.

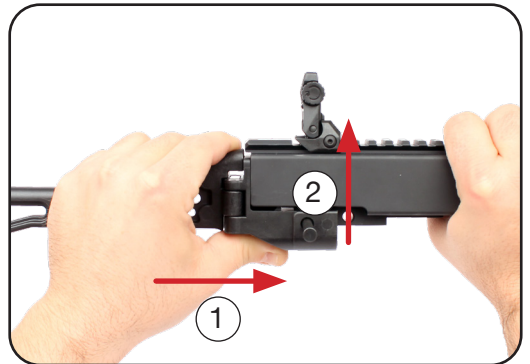

- i. Connect the stock and the receiver by mounting the take-down pin.

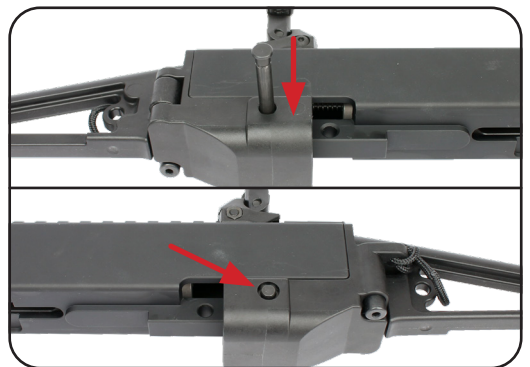


- j. Place the lower receiver on upper the receiver and push in the front and rear take-down pin from the right side.
k. Execute a functional check (see chapter „5.4 Functional check“ on page 31)

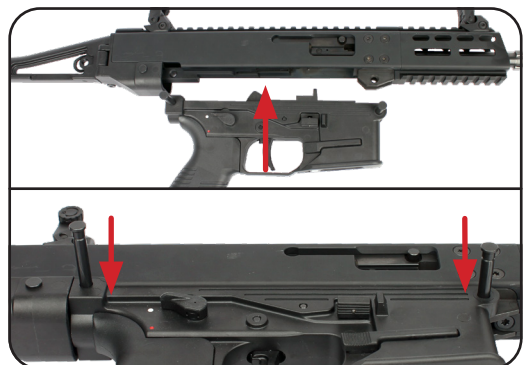

5.3.2 Assembly of the handguard

- a. Slide the handguard on the upper receiver until the screws can be mounted.
- b. Hand-tighten the lower, shorter screw and the upper, longer screw.
- c. If available, mount on the suppressor.

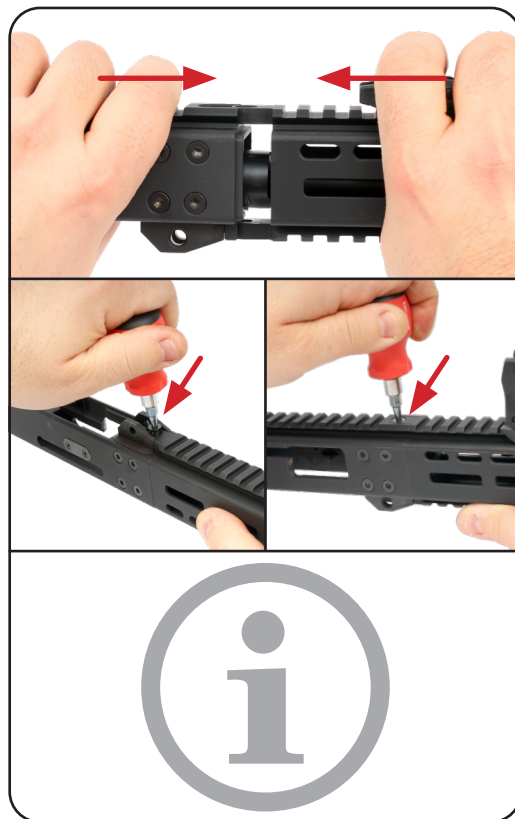

5.4 Functional check

- a. Clear weapon (see chapter „4.1 Clearing weapon“ on page 13).
- b. Push on right side bolt catch » bolt shall snap into closed position.
- c. Pull charging handle to its rearmost position and push bolt catch upward » bolt shall stay in open position.
- d. Push on left side bolt catch » bolt shall snap into closed position.
- e. Engage safety and pull trigger » hammer shall not strike.
- f. Rotate right side fire selector to single fire position and back to safe position » shall snap audibly in both positions.
- g. Rotate left side fire selector to single fire position, pull trigger and hold » hammer shall strike audibly.
- h. Pull charging handle to the rearmost position and slide it to forward position. Release trigger and pull it again » hammer shall strike audibly.
- i. Engage safety, insert an empty magazine and pull downward » magazine retainer must hold securely.
- j. Pull charging handle to rearmost position and release » bolt shall stay open.
- k. Push left magazine retainer and pull magazine downward » magazine shall come loose.
- l. Reinsert empty magazine, push right magazine retainer and pull magazine downward » magazine shall come loose.
- m. Pull charging handle to the rearmost position and release » Bolt shall run to closed position. Repeat steps i to m with all available magazines.
- n. Engage sights » both shall audibly snap in open position and point straight upward.
- o. Close sights » both shall audibly snap in closed position.
- p. Check extracting and retracting and locking mechanisms of installed Stock for proper function (see chapter „6.1 Stocks / Adapters“ on page 33).
- q. Inspect installed accessories for function and tight mounting..

If any function fails, disassemble the weapon, check for defective parts, reassemble the weapon and check for correct reassembly. If the failure persists, refer to armorer.

5.5 Troubleshooting table

#	Observation	Immediate action	Ref.
1	Inconsistent impacts	Control correct position and tight sit of the iron sights. Present weapon at first opportunity to armourer for inspection.	20
2	Failure to feed	Pull charging handle to rearmost position and release. Inspect visually if a cartridge is chambered. In case of jam, remove magazine, clear and switch to other magazine.	22
3	Failure to eject	Pull charging handle to rearmost position and observe for ejected shell or cartridge. Inspect barrel to be clear. Load a fresh cartridge. Present weapon for inspection of extractor and ejector to an armourer at the first opportunity.	22
4	Failure to strike	Pull charging handle to rearmost position and remove eventual obstructions captured in the upper receiver. Load a fresh cartridge. If failure repeats, clean weapon or present it to an armorer.	22 13
5	Failure to ignite	Wait 30 seconds with the muzzle pointing to a safe direction. Then pull charging handle to rearmost position and observe for ejected cartridge. Collect cartridge for later analyses. Load a fresh cartridge. Present weapon and ejected cartridge to an armorer at the first opportunity.	22

HINWEIS!




Failure reports to the manufacturer must include the serial number of the weapon, the type of ammunitions, the history of the failure and the history of the attempted corrective actions. The report can be sent to B&T by E-Mail along with pictures


6. Accessories

6.1 Stocks / Adapters


Picture	Art.-No.	Description
	BT-450093	Folding stock (Standard)
	BT-20506	Telescopic stock
	BT-20517	Telescopic stock (Brace Adapter)
	BT-200630	NAR-Adapter
	BT-450228	M4-Buffer-Tube

Picture	Art.-No.	Description
	BT-450034	Pistol

6.2 Flashhider

Picture	Art.-No.	Description
	BT-400983	Flashhider Vortex QD

6.3 Lights

Picture	Art.-No.	Description
	BT-WMLX-B-W-L-GEN3	B&T Weapon Mounted Light GEN-3


6.4 Magazines

Picture	Art.-No.	Type	Description
	BT-30183 BT-30298 BT-30296 BT-30209	APC9	Magazine 30 rounds Magazine 25 rounds Magazine 20 rounds Magazine 15 rounds
	BT-30531 BT-30376 BT-30528	APC45	Magazine 25 rounds Magazine 17 rounds Magazine 12 rounds
	BT-231229 BT-30436	APC9 APC45	Magazine loader
	BT-300696	APC9	B&T bumper pad for magazine PRO
	BT-300698	APC9	B&T magazine upgrade kit with rubber bumper for old B&T magazines
	BT-22379 BT-22380	APC9 APC45	Magazine clamp


6.5 Silencer

Picture	Art.-No.	Description
	SD-988206	Silencer SQD™
	SD-988100	Silencer QD™
	SD-988100-C	Silencer compact QD™
	SD-123020	Silencer RBS-9 QD
	SD-123021	Silencer RBS-9 Compact QD

6.6 Sights

Pos.	Item no.	Description
 <p>A black, compact, rectangular sight with a yellow illuminated reticle. The side of the sight is labeled 'ACRO P-2 3.5 MOA #WS418898'.</p>	AP-200691	Aimpoint® sight ACRO P-2 3.5 MOA black



6.7 Charging handle

Picture	Art.-No.	Description
 <p>A large, light gray information icon consisting of a lowercase 'i' inside a circle.</p>	BT-450124	Charging handle foldable

6.8 Grips

Picture	Art.-No.	Description
	BT-231227-BK	Angled fore grip 45° picatinny rail attachment
	BT-211564-BL	Unigrip QD short
	BT-21840	Unigrip QD

6.9 Maintenance

Picture	Art.-No.	Description
	SC-99B/6	Cleaning rod extension
	SC-65B	Copper brush 9 mm

7. Warranty statement

Warranty claims on behalf of the Client are to be explicitly declared as such. During the legal warranty period, B&T provides warranty cover solely for defects that arise as a result of faulty materials, construction errors or poor workmanship. If a warranty claim is justified, B&T will, at its own discretion, either repair or replace the defective good. Costs incurred in transporting the defective good to B&T are borne by the Client. Spare parts fitted and replaced become the property of B&T.

Inasmuch as is legally permitted, any other liability of B&T is excluded, in particular liability for damages arising either directly or indirectly from the delivered good itself, from its use or from its defects

Merchandise is covered by the warranty provisions of the manufacturer. Parts that are naturally subject to wear and tear, damage arising from insufficient maintenance work, noncompliance with operating regulations and cases of force majeure are all excluded from warranty cover. Warranty claims lapse if the Client itself or third parties alter or repair the delivered good without the prior written consent of B&T. All product specifications are subject to change without prior notice. Published data are mean values and therefore not suitable acceptance criteria.

The manufacturer:

B&T AG - 3608 Thun - Switzerland

Phone +41 33 334 67 00

e-mail: info@bt-ag.com

Notizen: